

Operating Instructions

Heating controller/
Room station RS-OT



Hoval United Kingdom

Hoval LTD
Northgate
Newark
Nottinghamshire NG24 1JN
Phone: +44 1636 67 27 11
Fax: +44 1636 67 35 32


Hoval Export

Hovalwerk AG
Austrasse 70
9490 Vaduz
Principality of Liechtenstein
Phone: +423 399 24 00
Fax: +423 399 26 18

Hoval


Function of the operating elements

The central rotary pushbutton and the labelled keys are designed for easy and straightforward operation.

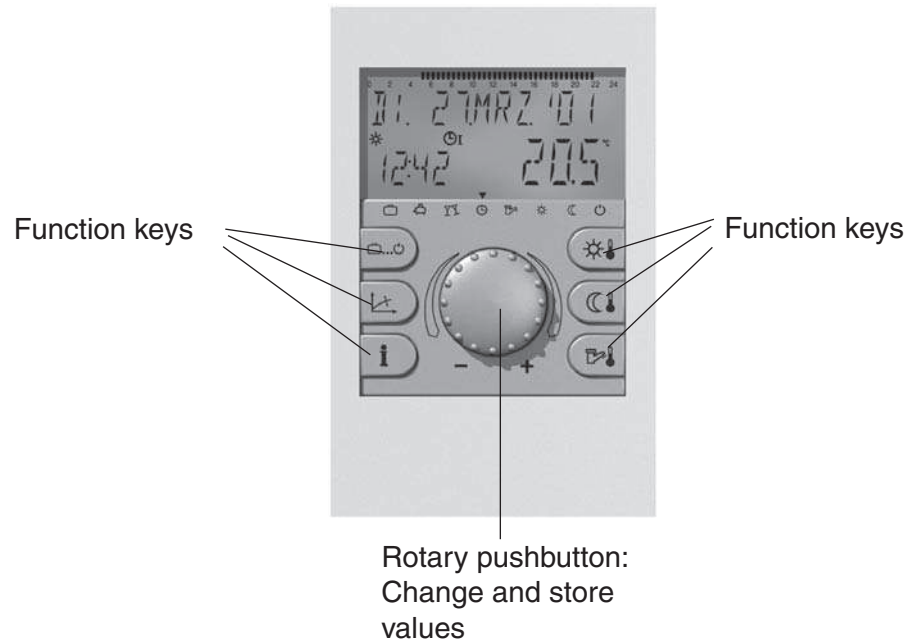





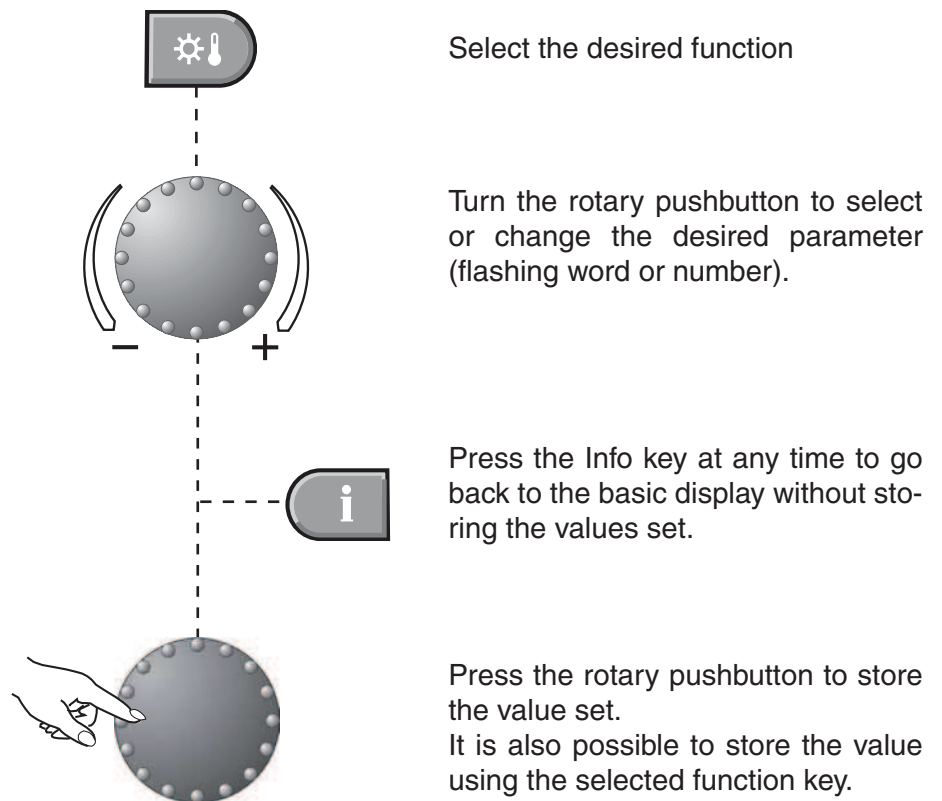
















Basic procedure for changing settings

An example










What to do if...

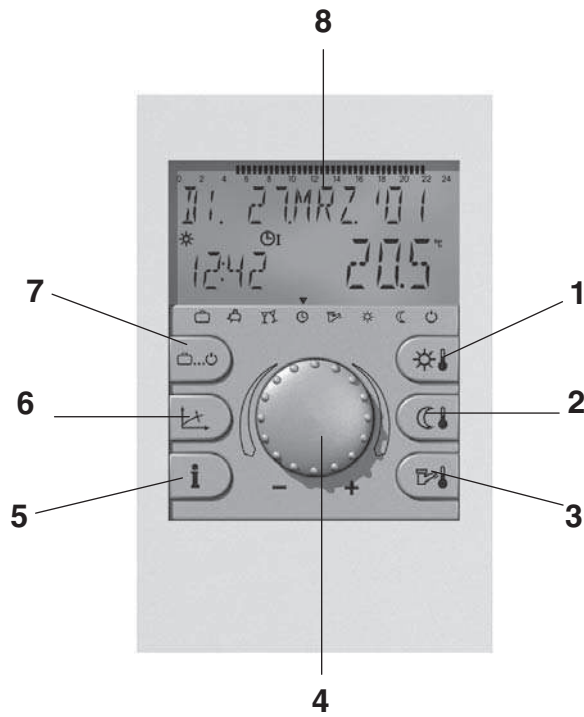










The following information can be used as a first level support in frequently occurring situations.

Observation	Remedy
It is too cold	Set a higher value for the room temperature with  and the rotary pushbutton (see page 9).
It is too warm	Set a lower value for the room temperature with  and the rotary pushbutton or set the operating mode to  (page 10,14)
From now on, equal day and night temperatures should be maintained continuously	Set the operating mode with  to  "HEATING" (page 14)
This evening, the heating should remain on for longer	Set the operating mode with  to  "PARTY" and set the desired time (page 12)
A larger amount of hot water is required	Press  for 3 seconds and set the additional loading time (page 22)
From now on, hot water but no heating is required	Set operating mode with  to  "SUMMER" (heating off, hot water only) (page 14).
Suddenly, there is no heating or hot water; it is cold.	Check the control unit for alarm messages and consult a heating engineer, if necessary.
The room temperature setpoint requires frequent adjustments because it is too cold or too hot	Change the adjusted heating curve (page 20)
Today, I will be absent for several hours during the day	Set the operating mode with  to  "ABSENT TIL" and set the return time (page 12)
I am travelling for a short period of time (e.g. 3 days)	Set the operating mode with  to  "HOLIDAY TIL" and set the return time (page 12)
I will be travelling for an indefinite period of time	Set the operating mode with  to  "RED. HEATING". When returning, set the operating mode with  to  "AUTOMATIC" (page 13)
In summer, it is too cold or too warm.	 indicates that the summer disconnection is active. If it is too cold, set the operating mode with  to  .

Control elements of the boiler control



Key	Designation	Function
1 	Daytime room temperature	Set the daytime room temperature. Page 9
2 	Reduced room temperature	Set the night time room temperature (reduced heating). Page 10
3 	DHW temperature	Set the domestic hot water temperature. Manual DHW reloading. Page 22
4 	Rotary pushbutton	Change the values by turning. Confirm the values by pressing. Function selection by pressing and turning.
5 	Information key	Show the operating data on the display. Return to the basic display without saving the values. Page 29
6 	Setting the heating curve	Setting the heating curve Page 20-21

Key	Designation	Function
<p>7</p> 	<p>Operating mode selection key</p> <ul style="list-style-type: none">  Holiday  Absent  Party  Automatic  Summer  Heating  Red. heating  Standby 	<p>Select the operating modes</p> <ul style="list-style-type: none"> Turn off the heating system during the holidays (frost protection) Page 12 Temporarily switch off heating Page 12 Extended heating Page 12 Automatic heating according to the preset heating times Page 13 only DHW; heating off Page 13 Constant heating mode Page 13 Constant reduced heating mode Page 13 System switched off - Frost protection activated Page 13
<p>8</p> 	<p>Display</p>	<p>The basic display shows the day of the week, date and time of the day, as well as the current boiler temperature and room temperature (room station)</p>  <p>Possible readouts:</p> <ul style="list-style-type: none"> 1 Active heating time 24h 2 Weekday display 3 Display of the active operating mode and the clock programme 4 Time of the day 5 Selected operating mode 6 Date / Day / Month / Year 7 Room temperature (if activated)